

SAMSUNG GALAXY TAB: USER MANUAL

Driver guide for navigating through the hardware and features of the tablet.



OUTSIDE HARDWARE:


- **Home key:** Return to Home screen
- **Volume key:** Adjust the volume of your device's sounds and audio playback.
- **Power key:** Press to lock or wake up the screen.
- **Back:** Return to the previous screen or close a dialog box, menu, or keyboard




ADJUSTING SOUND:

Volume: Below are other ways to adjust the sound instead of the volume keys

1. Select **Settings** from the main menu

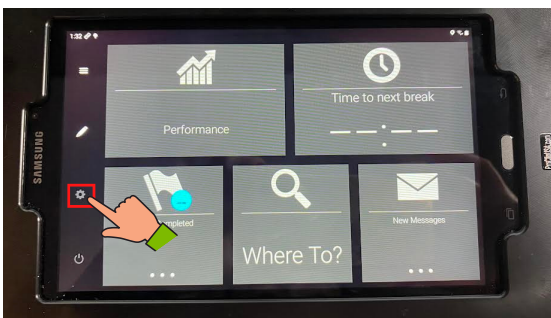


2. Locate **Volume** and adjust as needed

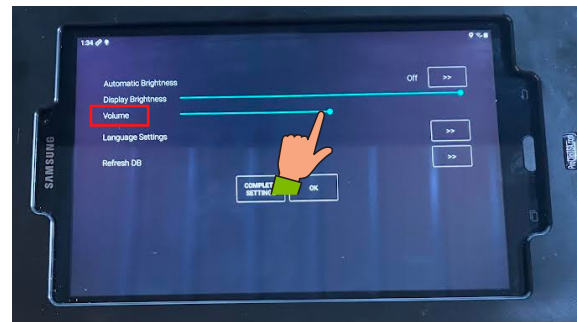


Mute:

1. To find the tablet's sound settings, swipe down to view the **Notification Panel**.
2. There you will see the **Sound** option, which is highlighted **blue**. Keep it highlighted for sound, click it to unhighlight for **mute**.

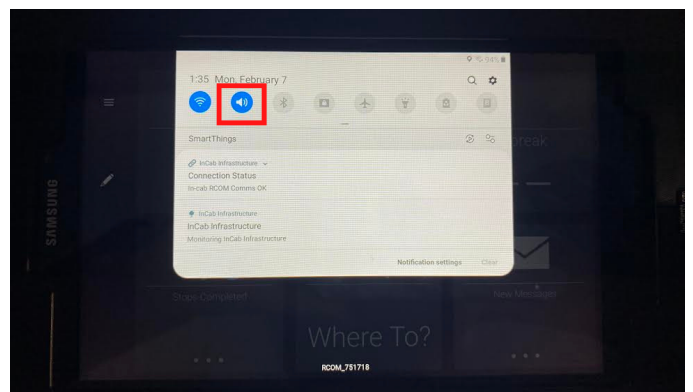


REFRESH DATABASE (DB):

1. Select **Settings** from the main menu

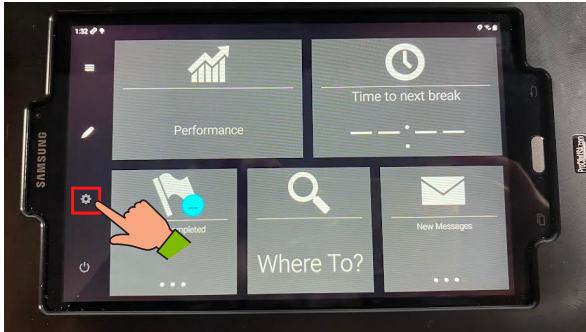

2. Locate **Refresh DB** and click its arrows

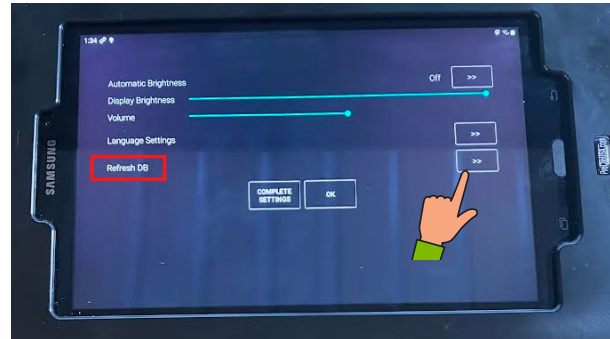


**Wait for the arrows to be unhighlighted.
That's how you'll know the system did a full refresh!**

HARD RESET:

1. Press and hold the **Power** key until the Device options menu is displayed



2. Either tap **Power**, to shutdown the tablet. Then hold the **Power** button again to turn the tablet back **on**.

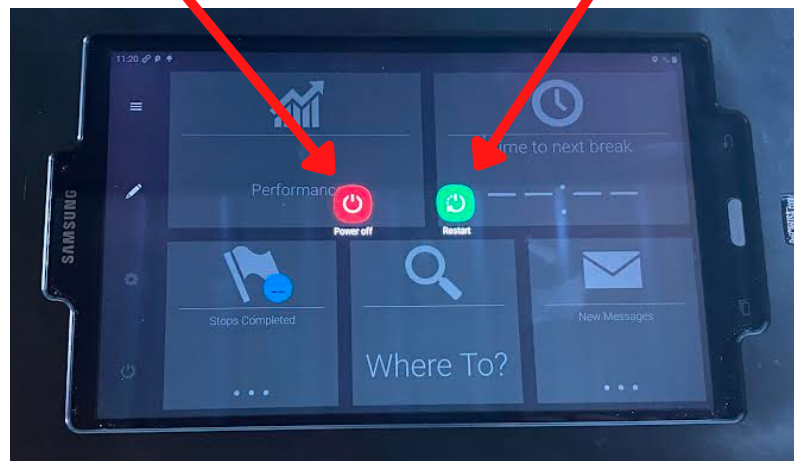

**BLUE TREE SUPPORT:
1-800-ORBCOMM**

BT Support: (800) 672-2666

- Ext 1 – Customer Care
- Ext 1 – English
- Ext 3 – Blue Tree

**MK SUPPORT:
217-728-9800 EXT 223**

**Still have questions
about the tablet?
Give us a call.
We're here to help!**